



ICE RESCUE+
SYSTEMS

RETRIEVER 120' - Dog Rescue Device
(To be used with 9-1-1 Reach Pole)

Product Manual

Purchased Date:

Limited Warranty

Living Waters LLC warrants the Retriever 120' - Dog Rescue Device for one (1) year from the purchase date and only to the original retail buyer that our products are free from defects in material and workmanship. If the buyer discovers a warranty related defect, the buyer should return the product to Living Waters, LLC. Living Waters LLC reserves the option to repair or replace any product returned under warranty.

That is the extent of our liability under this warranty and, upon the expiration of the applicable warranty period, all such liability shall terminate. **Buyer MUST register product with Ice Rescue Systems for warranty to be effective. See “Register Your Product Instructions.”**

Warranty Exclusions

Living Waters LLC does not warrant products against normal wear and tear, unauthorized modification or alteration, improper use, improper maintenance, accident, misuse, negligence, damage, or if the product is used for a purpose for which it was not designed. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Except as expressly stated in this warranty, Living Waters LLC shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of the product. **Buyer MUST register product with Ice Rescue Systems for warranty to be effective.**

Warning

Products manufactured by Living Waters LLC are intended for use by **professionals trained and experienced in the use, inspection, and maintenance of these products**. Many products which Living Waters LLC manufactures are used in water operational environments which pose a very substantial risk of serious injury or death. You must read and understand all of the manufacturer’s instructions before use. Any person purchasing this equipment assumes the responsibility for seeking proper training in its use. Purchaser also assumes all risk for any injury or damage sustained while using any of this equipment. Failure to follow these warnings increases the risk of injury and death.

Keep this user instructions/information sheet as a permanent record.

It is suggested that the user refer to this user information sheet before and after each use of the Retriever 120' - Dog Rescue Device. Do not alter or intentionally misuse this Retriever 120' - Dog Rescue Device in any way. Any alterations or repairs to this Retriever 120' - Dog Rescue Device should be conducted by the manufacturer only. Use caution when using this equipment around moving machinery, electrical hazards, sharp edges, chemical hazards and high heat environment or flame. Carry the Retriever 120' - Dog Rescue Device where it will be protected as the Retriever 120' - Dog Rescue Device could melt or burn and fail if exposed to flame or high temperature.

If you have any questions concerning the condition of your Retriever 120' - Dog Rescue Device, or have any doubt about putting it into service contact manufacturer.


Living Waters LLC dba Ice Rescue Systems
P.O. Box 4137 Grand Junction, Colorado 81502
Phone/Fax 1- 844-423-7377 / 970-245-1177 Fax
www.icerescuesystems.com

****Register Your Product Instructions**
<https://icerescuesystems.com/product-registration>

Designed for fire department, SAR, military, industrial and commercial applications.

Usage and Applications

The Retriever 120' - Dog Rescue Device is designed to reach a dog in **static** ice/water environments and is designed for rescuer safety.

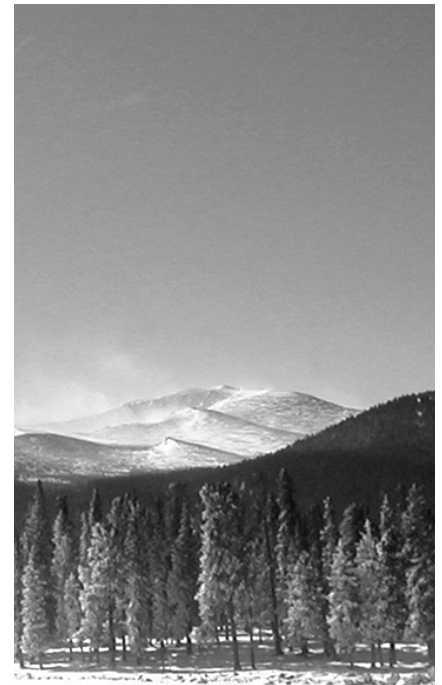

ICE RESCUE
SYSTEMS +

Before Use

The techniques employed in the proper and safe use of this equipment may only be learned through *personal* instruction received from an instructor who is well-qualified in all phases of water rescue/recovery operations. Such instruction will include an evaluation of your comprehension of, and ability to perform, the tasks required to safely and efficiently use this equipment. Never attempt its use until you have received such instruction and are believed competent by your instructor.

Use of this User Information Sheet

It is suggested that this user information sheet be retained in a permanent record after it is separated from the Retriever 120' - Dog Rescue Device, and that a copy of it be kept with the Retriever 120' - Dog Rescue Device.

It is suggested that the user refer to this user information sheet before and after each use of the Retriever 120' - Dog Rescue Device.

WARNING!

WARNING PROPER TRAINING IS REQUIRED!

- + This product is part of a personal protective, rescue or work support system.
- + You must read and follow the manufacturer's instructions for this product and each component of the complete system.
- + You are responsible for understanding the intended use of this tether line, and the intended application and use of each of the multiple attachment points located on this tether line.
- + You could be killed or seriously injured if you do not read and understand the user information before using this piece of equipment.
- + The user of this equipment should formulate a rescue plan and the means at hand to implement it when using this equipment.
- + Special training and knowledge are required to use this equipment.
- + Use and inspect this equipment only in accordance with these instructions.



Retriever 120' - Dog Rescue Device

SPECIFICATIONS

The Retriever 120' - Dog Rescue Device is designed for the special requirements of a trained rescue professional.

ENVIRONMENTS:

This Retriever 120' - Dog Rescue Device may be used in **static** ice/water environments including:

+ Ponds + Lakes + Reservoirs

FLOTATION: Floatable Line and Buoy

MATERIAL: polypropylene rope, shock cord, pull tabs

LINE: Polypropylene Solid Braid. 3/8" x approximately 120 feet

WEIGHT: 7 lb. 6 oz.


FEATURES:

- + Independent extraction from rescuer
- + Floatable line
- + Separate line attachment
- + Built in "snare-loop"
- + 120 feet rope
- + Assists in dog extraction

PREPARING THE Retriever 120' - Dog Rescue Device FOR USE INSTRUCTIONS:

Retriever 120' - Dog Rescue Device is designed to augment rescue safety and retrieval efforts of persons in or on ice.

- 1) Inspection – Visual cursory inspection for cracking or excessive wear in the following areas:
 - a. Wood Pole
 - b. Polypropylene Rope
 - c. Snare Loop
- 2) Make a large loop
- 3) Take a bite of rope, place under the blue shock cord and yellow pull tab with the one farthest away from foam pad.
- 4) With the "snare-loop" place it under the closest blue shock cord and yellow pull tab. Snare Loop facing foam pad.
- 5) The upper line should be taut while the bottom buoy line is large enough to be placed over the dogs head.
- 6) The buoy should be centered in line.
- 7) Once rope is secured over dogs head. Rescuer will pull the rope to secure the rope around the dog's neck.
- 8) Shore support will remain in control of line with tautness applied to line.
- 9) Rescuer will help assist dog's hind quarters out and upon the ice with 9-1-1 Reach Pole.

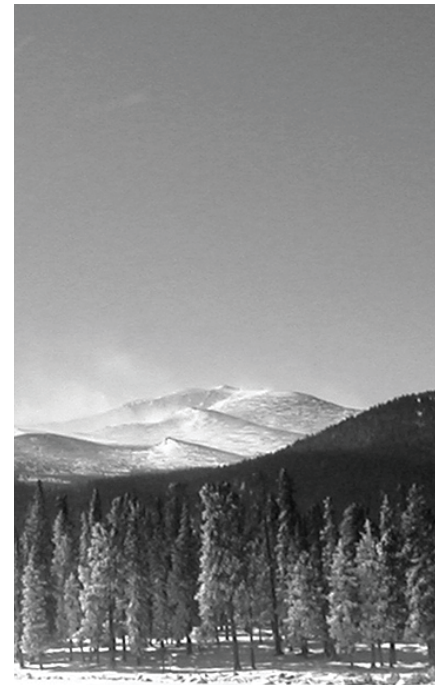

ICERESCUESYSTEMS+

CARE, MAINTENANCE, SERVICE and STORAGE

Before and after each use, inspect your Retriever 120' - Dog Rescue Device to ensure that it is in a serviceable condition. Check for worn or damaged parts. Ensure all rope, buoy, shock cord, snare loop and bag are present. Inspect blue/yellow rope for wear, cuts, burns, frayed edges or other damage. Thoroughly inspect Retriever 120' - Dog Rescue Device after any period of extended storage. Store Retriever 120' - Dog Rescue Device in a cool, dry, clean environment out of direct sunlight. Do not expose Retriever 120' - Dog Rescue Device to flame or high temperature environments. Avoid contact with any corrosive or caustic chemical agents such as acids, bases, or petroleum products. Discontinue use of product if it has come in contact with any of the above listed or any suspect chemical agents. Avoid storage and use of Retriever 120' - Dog Rescue Device in areas where chemical vapors may exist. Discontinue use of Retriever 120' - Dog Rescue Device and remove from service if inspection reveals an unsafe conditions.

- 1) Wash with fresh warm water in mild detergent after use.
- 2) Thoroughly dry rope by hanging.
- 3) Store in well ventilated area to prevent dry rot.
- 4) Avoid storing in direct sunlight or in sub freezing temperatures (prolonged exposure to sunlight will deteriorate the polypropylene, rope, pull tabs and shock cord).
- 5) Do not power wash.
- 6) Inspect your **Retriever 120' - Dog Rescue Device** regularly for damage, including abrasion, cuts and UV damage to shock cord / pull tabs, rope and bag. If in doubt contact Ice Rescue Systems at info@icerescuesystems.com

RECORD KEEPING:

It is suggested that the user of this Retriever 120' - Dog Rescue Device keep a permanent record listing.

The date and results of each usage inspection. Such record should show, as a minimum, inspection criteria as written in section maintenance, service and storage.



